

序号↵	适用零部件↵	力矩值↵
1↵	缸头螺母 M8↵ <i>NUT, for cylinder head M8</i>	(24~32)N.m↵
2↵	螺栓 M6↵ <i>BOLT M6</i>	(10~15)N.m↵
3↵	离合器紧固螺母↵ <i>FASTENING NUT, CLUTCH</i>	(35~45)N.m↵
4↵	磁电机转子螺母↵ <i>NUT, FLY WHEEL</i>	(54~60)N.m↵
5↵	气门盖↵ <i>CAP, OIL FILTER SCREEN</i>	(20~25)N.m↵
6↵	放油螺塞↵ <i>OIL BOLT</i>	(32~40)N.m↵
7↵	火花塞↵ <i>SPARK PLUG</i>	(20~25)N.m↵
8↵	合箱及左、右盖螺栓↵ <i>BOLT FOR CRANKCASE ASSY AND LEFT&RIGHT COVER</i>	(10~15)N.m↵